

CRIMPER: OPERATING INFORMATION

MODEL CR: (ELECTRIC CRIMPER)

MODEL CECR: (ELECTRIC COUNTER/WRAPPER/BAGGER/CRIMPER)

1. Insert Crimping Head into black receiver on machine. "Push and Twist" to ensure crimping head is located and locked in place.
2. Turn machine "ON".
3. For Pre-Crimped "Shotgun Shell" Style Wrappers:
Fill wrapper. Be sure coins are firmly stacked against the closed end of wrapper. Press the filled coin wrapper firmly against crimping head till the wrapper is tight and a rolled seal has been formed.

For Flat Style Wrappers:

We recommend you cut approximately 1/4" off of one end of the flat wrapper to ensure tight crimping. Fill wrapper. Divide the extra paper evenly on each end. Back one of the open ends with your finger. Press the pre-filled coin wrapper firmly against the crimping head till wrapper is tight and a rolled seal has been formed. Repeat on opposite end.

NOTE: Press at a steady rate (2-3 seconds). DO NOT FORCE. Let the crimper do the work.

Crimping heads are available in the following denominations:

| <u>Denomination</u> | <u>Part Number</u> | <u>Price</u> |
|---------------------|--------------------|--------------|
| Penny | 7-5061 | \$50.00 |
| Nickel | 7-5062 | \$50.00 |
| Dime | 7-5063 | \$50.00 |
| Quarter | 7-5064 | \$50.00 |
| 50 Cent | 7-5067 | \$50.00 |
| Dollar | 7-5065 | \$50.00 |
| Canada \$2 | 7-5066 | \$50.00 |